

RGBCW Remote Manual



Please read the manual before using this product.

1.Code Matching

All remotes are factory settings. Users need to match the lights with remote before normally control the lights.

Steps:

- 1.Open the battery cover and use 2 of AAA batteries. Please distinguish the + and – poles
- 2.Turn on the lights that want to control in one group and the lights will be in breathing pattern, this process will last for 30s , waiting for code matching. 30s later the lights will turn to white color all the time, it means out of matching period, please turn off and turn on the lights to repeat matching step.
- 3.When lights are in breathing pattern, press ZONE 1# or other keys of ZONE function keys. When the light turns to blue, it indicates the matching is successful.

Warning:

In the process of match code, except for ZONE 1 to ZONE 6 keys, NEVER press any other keys of the remote, otherwise the matching will fail. If no match operation within 30s, light will turn to white..

2.Code Clearance

If you want to regroup the lights which are already matched, you must clear the code of the lights firstly from remote.

Steps:

1. Code clearance on lights in a certain group

Turn on all of the lights in a certain group, long press on Zone # for 10s, these lights will extinguish and then light on. This connotes the code clearance is successful. Power off and on the lights and then you can do code match operation.

I.e.: If there's a need of code clearance for lights in ZONE 1, long press on **1** for 10s to clear codes for all lights in the ZONE 1.

2. Code clearance on all lights

Turn on all lights, Long press on **ALL ON** for 10s, all lights presenting full brightness at Warm white it indicates clear code successfully . Power off and on the lights and then you can do code match operation accordingly
After code clearance is done, lights will be at factory setting.

WARNING:

During code clearance operation, except for related code clearance keys, NEVER press any other keys, otherwise the code clearance will fail. If code operation fails, need to power off lights and repeat the operation.

3.Additional Introduction

To felicitate more convenience to users, the system is designed to controlled by 8 remotes at most. According to the cod matching steps, you can pair 8 remotes with the lights you want to control separately .After code matching, you can use 8 remotes to control your lights.

Keys and Description

No.	Keys	Description
1	ALL ON	One press and turn on all lights.
2	ALL OFF	One press and turn off all lights.
3		Touch the color wheel and choose the light color you desire.
4		Brightness Decrease Adjustment: One short press to decrease one phase of brightness and 19 phases in total. Long press to fast decrease the brightness till to the min brightness.
5		Brightness Increase Adjustment: one short press to increase one phase of brightness and 19 phases in total. Long press to fast increase the brightness till to the max brightness.
6		Warm white adjustment: Short press to reduce the CCT and long press to fast reduce the CCT till to the lowest CCT 2200K
7		Cool white adjustment: Short press to increase the CCT and long press to fast increase the CCT till to the highest CCT 5000K
8		CCT Quick Choosing Key: The first press : 2200K; The second press: 2700K ;The third press :3000K ; The fourth press: 4000K The fifth press :5000K ; The six press :Red; The seventh press :Green ; The eighth press: Blue. It goes with this circulation.
9	ZONE 1/2/3/4/5/6	Zone/Group key & ON/OFF functions: Short press to turn on the lights in the corresponding group and long press for 2s to turn off the lights in the corresponding group.
10		Lighting Modes Keys: MODE 1 for 7 colors shadowing color changing, MODE 2 for single color shadowing color changing, MODE 3 for compound shadowing-gold, cyan and purple; MODE 4 for warm white and cool white shadowing.
11	Indicating Light	Indicating light is observed when touching or pressing keys.

NOTE:

When you want to adjust the brightness/CCT or colors of lights in a certain group, firstly press the key of Zone function and then use corresponding keys to adjust the brightness/CCT or colors.

For example, you want to adjust the brightness of lights in Zone 1, firstly press  and use  or  to adjust the brightness. If you want to change all lights at the same mode, please press ALL ON and use the related keys to adjust the brightness/CCT/Color